

# **Quick Start Guide**





**Quick Start Guide** 

First Network Group Inc 1-800-578-6381 www.DHCPatriot.com




The DHCPatriot is a broadband subscriber authentication device designed to give network administrators the same visibility on DHCP networks they once had on dial networks.

#### Introduction

This quick start guide will help experienced IT personnel get the DHCPatriot up and running in a short time. If more detailed instructions are required, please refer to the installation instructions in the full manual. Follow the steps in the order presented below. Please note that although steps 14 and 15 are both labeled as optional, one or the other must be performed to complete the setup of the DHCPatriot system.

#### 1) Racking the Devices


Use four or six customer supplied rack screws to rack each device in a 19 inch two or four post rack as shown in the illustration.

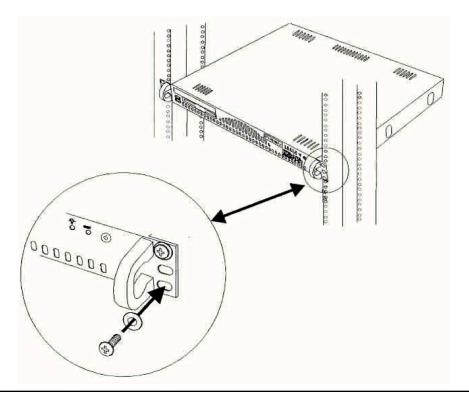

Racking the DHCPatriot device

## 2) Cabling the Devices

Run standard ethernet cabling from LAN 1 on each device to the desired switch. Connect the supplied red crossover cable to LAN 2 on each device. Connect the supplied power cables from each device to an AC power source. Connect serial console using the supplied serial console shells, if desired. See the illustration below.

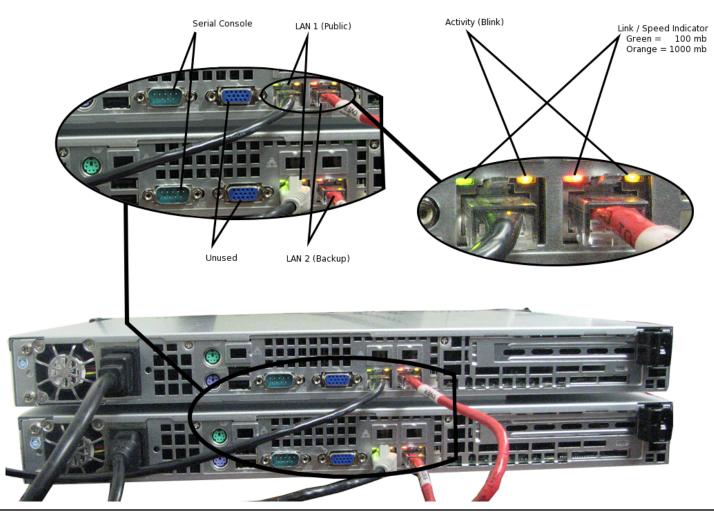


Cabling the DHCPatriot devices

**NOTE:** As of hardware revision 2013-1, the ethernet ports on the back of the system are reversed. Please follow the labels on the back of the device and plug the ethernet cable into the port labeled LAN and the red crossover cable into the port marked RED.

## 3) Power on the devices


On the front of the devices, press the power button to turn them on. It may appear that they are already on due to the network indicators being lit, however, if the power light is not lit, they are not powered on. The lights and buttons are explained in the illustration below.

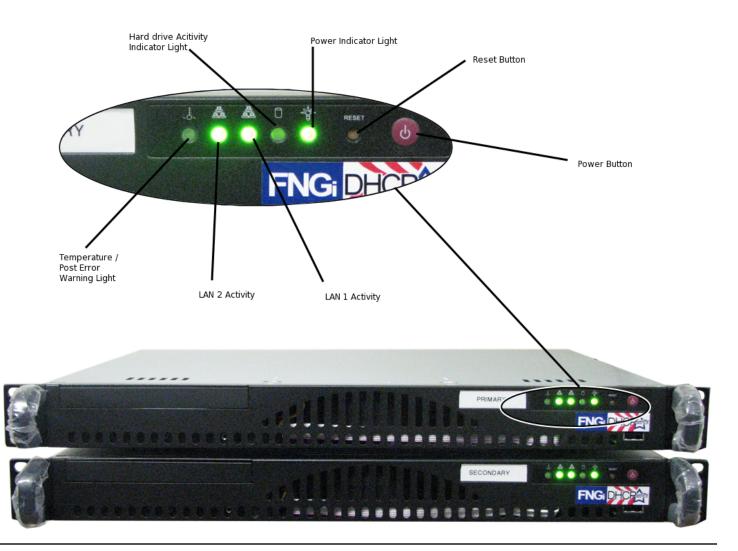

DHCPatriot front panel buttons and indicators

#### 4) Connect to the Devices

The devices can be accessed via SSH or serial console. The username is `admin', and the password is `cU\$0gNn1'. The fourth character is a zero. A menu interface will appear as shown in the illustration.

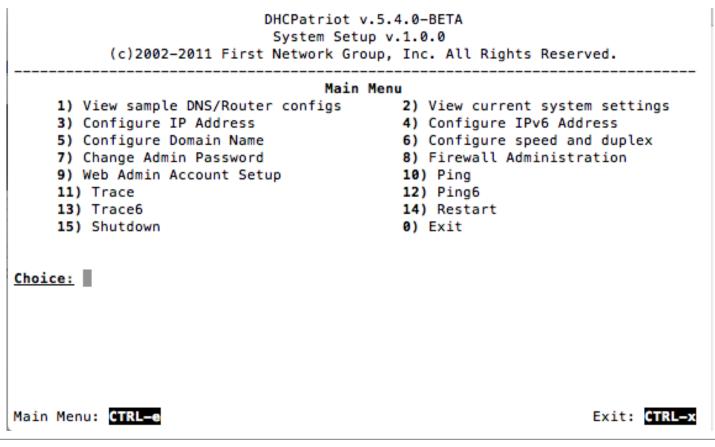

DHCPatriot Console Menu Configuration Interface

#### 5) Configure IP Address

Press 3 to enter IP address configuration. Press 1 to proceed. Enter the IP address, the netmask and the gateway. Press 1 to proceed. This will need to be done on each device.

#### 6) Configure Domain Name

Press 5 to enter the domain name configuration area. Press 1 then enter the domain name. Enter only the domain, DO NOT enter patriot, patriot-1 or patriot-2. Then press 1. Press enter. You should return to the main menu. This will need to be done on each device.

#### 7) Set Speed and Duplex

Change speed and duplex (ethernet media settings) on the main interface, if necessary. This will need to be done on each device, if necessary. Default is auto-negotiation.

#### 8) Open the Firewall

Press 8 to allow an IP address or network through the firewall. The important ports would be 22 (SSH), 80 (HTTP), and 443 (HTTPS). This is to allow a machine to access the DHCPatriot system for administration purposes. The system defaults to not letting anything through, so at least one machine will need to be allowed prior to rebooting after setting the IP address. This only needs to be performed on one device.

#### 9) Add Account for Web Administration

Press 9 to enter an account for web administration. The remainder of the setup is performed via the web interface. Enter a username and password that you'll remember. Set the admin level to 6. This only needs to be performed on one device.

#### 10) Reboot


Press 14 to reboot. Press 1 to proceed. When the device comes back up it will be at the new IP address and domain set previously. This will need to be done on each device.

#### **11) Configuring DNS**

Your DNS server needs to be configured for the new DHCPatriot system devices that have just been configured. Set a DNS entry of patriot.<domain you entered> pointing to both IP addresses that were set in the previous steps. Also create matching forward and reverse entries of patriot-1.<domain> and patriot-2.<domain> corresponding to the IP addresses entered previously.

#### 12) Connect to Web Interface

The DHCPatriot system will be reachable at https://patriot.<domain>. Enter your username and password. You should receive a screen that looks similar to the illustration below.

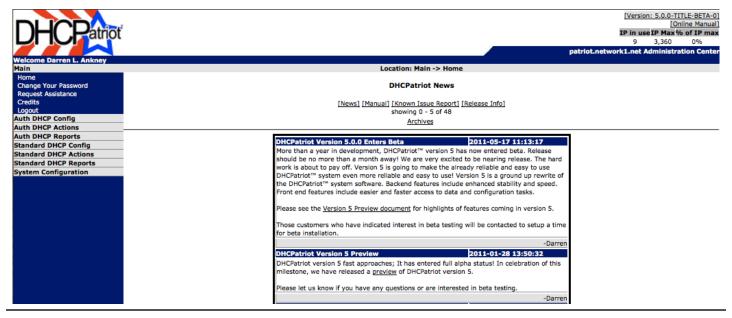

Web Administration Screen after logging in.

**NOTE:** If you do not see the DHCPatriot News or an error about not being able to load the news, the page is not done loading. If the DHCPatriot cannot get to the internet, the news will not load. The menus on the left will not be fully populated until the page completes loading, depending on your browser. If you would like to hurry the process along, click an option in the menus on the left other than Home to leave the main page and continue.

#### 13) General Configuration

Expand the System Configuration menu and click General Setup. This will begin the initial configuration. Click Edit Settings. Make changes as necessary and Commit.

### 14) Add a Network for Authenticated DHCP (Optional)

Expand the Authenticated DHCP Menu and click on Shared Network. Add a Shared Network. Using Unauthenticated Subnet, add at least one unauthenticated subnet. Using Authenticated subnet, add at least one authenticated subnet. Enter static, and maintenance subnets using Static and Maintenance Subnet routines as necessary. Enter these subnets on the appropriate interface of the customer facing router. Add a policy route or multiple policy routing entries to send the unauthenticated traffic to the primary DHCPatriot device.

#### 15) Add a Network for Standard DHCP (Optional)

Expand the standard DHCP menu. Click shared network config and add a network. Add dynamic, static, or maintenance networks as needed. If only known hosts are allowed in the dynamic, then add known hosts in known client config. If a static subnet is configured, but sure to assign some static assignments under static IP assignment.

This document Copyright ©2009 First Network Group Inc. <u>http://www.network1.net</u> 4-6 Perry St. P.O. Box 1662 Wapakoneta, OH 45895

DHCPatriot<sup>TM</sup> is a trademark of First Network Group Inc. (http://www.network1.net) All other names and brands are protected by their respective companies.



© Copyright 2002-2011 First Network Group Inc 4-6 Perry St. PO Box 1662 Wapakoneta, OH 45895 DHCPatriot@network1.net 800-578-6381 opt. 3

DHCPatriot<sup>™</sup> is a trademark of First Network Group Inc. (<u>http://www.network1.net</u>) All other names and brands are protected by their respective companies.